


OPTIONAL - CERAMIC DOME FILTERS

The ceramic dome replaces standard dome with the cloth filter in top bowl

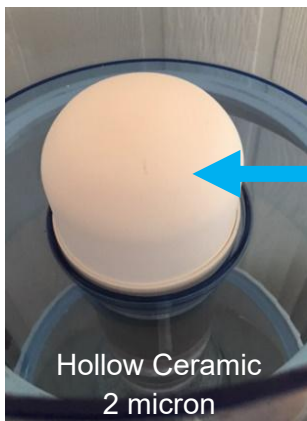

Hollow Ceramic
2 micron
Replace 6 monthly



Fluoride Ceramic
0.5 micron
Replace 12 monthly

UNSCREW FILTER ANTI-CLICK WISE FROM BOTTOM BOWL. UNDO NUT AT THE UNDER THE BOTTOM BOWL TO REMOVE STANDARD DOME. REPLACE WITH CERAMIC DOME



Carbon
5 micron



ENSURE **HOT WATER** REMAINS **OFF** UNTIL YOU HAVE A STEADY FLOW OF WATER FROM THE HOT TAP. YOU WILL RUN THE RISK OF BURNING OUT THE KETTLE IF YOU LEAVE IT ON WITHOUT ENOUGH WATER IN IT.

Please note that **water flow** is much slower when using the Ceramic Dome filter. When first installing it can take up to 48 hours for the water in top bowl to filter through. The flow does increase once the filter has soaked in. You can expect around **1 litre per hour** to go through the filter. For first time use, discard first few litres that has gone through filter.

Maintenance & Care

This filter does become very dirty as it collects all the solid particles in the water on the outside of the ceramic dome. Unscrew the carbon filter from top bowl, then undo the nut at the bottom of the bowl to remove the ceramic dome. Under running water, scrub lightly with a toothbrush to remove dirt build-up. Do not use any soap or detergents.

FOR SALES, FILTERS, SERVICE & REPAIRS

PH: 0401 441 291 
www.awesomewatermackay.com
info@awesomewatermackay.com



1ST TIME USAGE INSTRUCTIONS



Run a thin stream of water into the spout of the ceramic dome, then fill a container with water and soak the ceramic dome for about 10-20 minutes.

Shake out the water on the inside of the dome - this will get rid of the initial chalky taste in the water when first installing a new filter.



FOR SALES, FILTERS, SERVICE & REPAIRS

PH: 0401 441 291 

www.awesomewatermackay.com

info@awesomewatermackay.com



SERVICING MACKAY SINCE 2004